





INT-60

PASS

PASS

INT-60



INT-60

POWER

INPUT1

INPUT2

INPUT3

INPUT4

MUTE

PASS

PASS



Preamp Output  
L  
R  
Right Left

Preamp Inputs  
L  
R  
4 3 2 Right Left 1 Right Left

Right

Left

Right

Left

CE

Jumper must be used with single-ended input

Replace with the correct type and value fuse

AC Mains: Slow Blow  
 220-240V  8 A 250V  
 120V  3 A 250V  
 100V

CAUTION  
Risk of electrical shock. Do not open.

Signal Gnd

~ AC Mains 50/60 Hz

Pass Laboratories, Auburn, CA 95602